



# QUICK START GUIDE


MODEL 3355

<b>PITCHES</b> <input type="text"/>	<input type="text"/> : <input type="text"/>	<b>PITCHES</b> <input type="text"/>
<b>HOME</b> <input type="text"/>	<input type="text"/>	<b>GUEST</b> <input type="text"/>
<b>BALL</b> <input type="text"/>	<b>INNING</b> <b>STRIKE</b> <input type="text"/>	<b>OUT</b> <input type="text"/>

VARSITY SCOREBOARDS



## QUICK START GUIDE

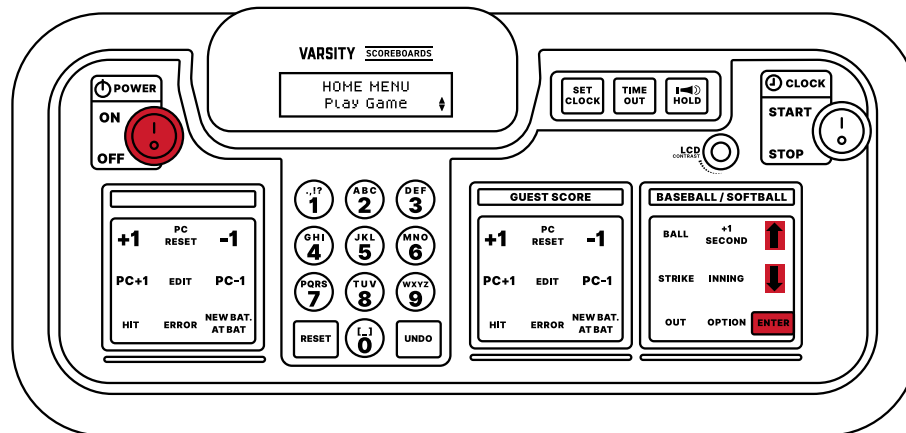

### HOME MENU

**NOTE:** Optional rechargeable controller battery should be charged prior to use.

When you first turn on the **Controller**, the **Controller screen** will display the **Home Menu**. Use the **Up** and **Down** arrows to navigate to **Play Game** if it is not already displayed. Press **Enter**.

### NETWORK SELECTION SCREEN

Use the **Up** and **Down** arrows to choose the preset network for the sport you are scoring. If the sport is not listed, more networks can be added. Refer to **STEP 3** of the **Network Setup** section of the manual.

**The game is now ready to begin.**

All of the standard functions of the keyboard are labeled on the **Game Inserts**. For Additional assistance, the QR code below links to the full operations guide and other manuals.



### STARTUP MENU

If the game Controller loses power in the middle of a game or shuts off unexpectedly, the Controller will display the **Startup Menu** when powered back on.

The **LCD Screen** will display **Startup Menu - Continue Game**. Choose this option to immediately resume the game.

To end the current game without finishing it, use the **Up** or **Down** arrow to navigate to **Home Menu** and press **Enter**.

**3355**  
**Manuals and Specifications**

*Use your phone camera to activate QR code.*