




# QUICK START GUIDE

Model #3385

<b>HOME</b> <input type="text"/> <input type="text"/>	<b>INNING</b> <input type="text"/> <input type="text"/>	<b>GUEST</b> <input type="text"/> <input type="text"/>	
<b>BALL</b> <input type="text"/> <input type="text"/> <input type="text"/>	<b>STRIKE</b> <input type="text"/> <input type="text"/>	<b>OUT</b> <input type="text"/> <input type="text"/>	<b>H-E</b> <input type="text"/> <input type="text"/>



## QUICK START GUIDE

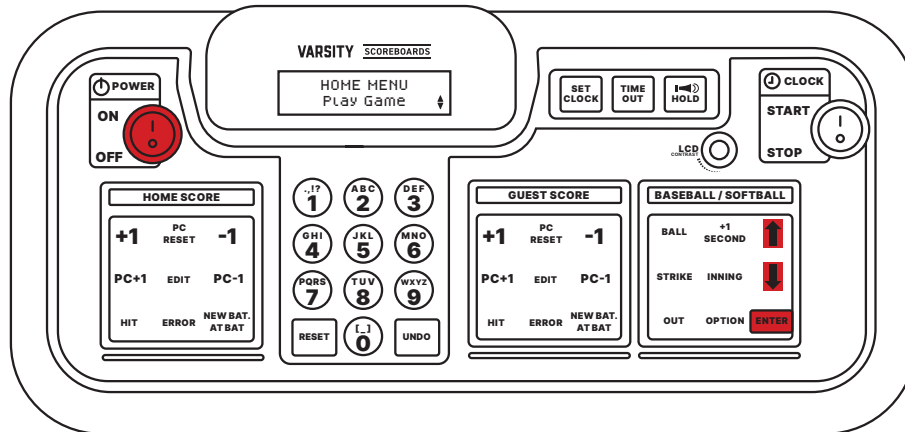

## HOME MENU

When you first turn on the Controller, the Controller screen will display the **Home Menu**. Use the **Up** and **Down** arrows to navigate to **Play Game** if it is not already displayed. Press **Enter**.

### NETWORK SELECTION SCREEN

Use the **Up** and **Down** arrows to choose the preset network for the sport you are scoring. If the sport is not listed, more networks can be added. Refer to **STEP 3** of the **Network Setup** section of the manual.

The game is now ready to begin.

All of the standard functions of the keyboard are labeled on the **Game Inserts**. For additional assistance, the QR code below links to the full operations guide and other manuals.



**3385**  
**Manuals and Specifications**

Use your phone camera to activate QR code.

## STARTUP MENU

If the game Controller loses power in the middle of a game or shuts off unexpectedly, the Controller will display the **Startup Menu** when powered back on.

The LCD Screen will display **Startup Menu - Continue Game**. Choose this option to **immediately resume** the game.

To end the current game without finishing it, use the **Up** or **Down** arrow to navigate to **Home Menu** and press **Enter**.