




# QUICK START GUIDE

MODEL 3359

PITCHES HOME <input data-bbox="164 1409 310 1518" type="text"/>	BALL STRIKE OUT <input data-bbox="488 1409 553 1518" type="text"/> <input data-bbox="776 1409 841 1518" type="text"/> <input data-bbox="1063 1409 1128 1518" type="text"/>									PITCHES GUEST <input data-bbox="1310 1409 1456 1518" type="text"/>
VARSITY SCOREBOARDS  GUEST  HOME	1	2	3	4	5	6	7	8	9	TOTAL <input data-bbox="1321 1612 1445 1724" type="text"/> <input data-bbox="1321 1738 1445 1850" type="text"/>
	<input data-bbox="396 1612 461 1724" type="text"/>	<input data-bbox="493 1612 558 1724" type="text"/>	<input data-bbox="591 1612 656 1724" type="text"/>	<input data-bbox="688 1612 753 1724" type="text"/>	<input data-bbox="786 1612 850 1724" type="text"/>	<input data-bbox="883 1612 948 1724" type="text"/>	<input data-bbox="980 1612 1045 1724" type="text"/>	<input data-bbox="1078 1612 1143 1724" type="text"/>	<input data-bbox="1159 1612 1224 1724" type="text"/>	



## QUICK START GUIDE

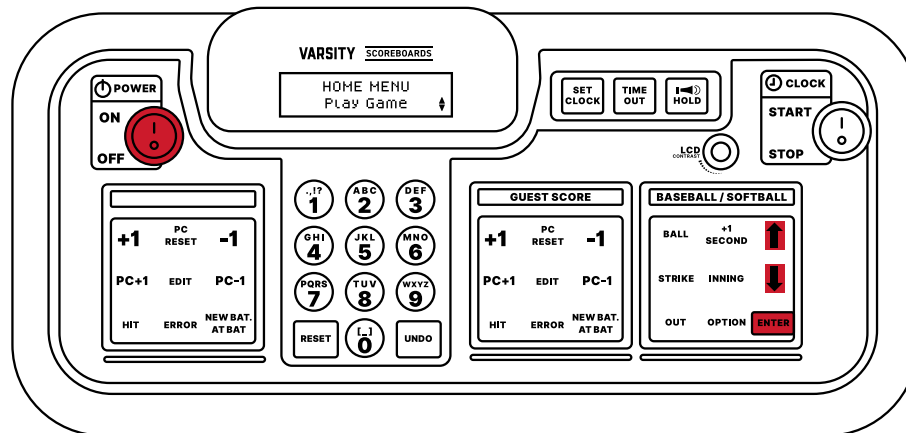

### HOME MENU

**NOTE:** Optional rechargeable controller battery should be charged prior to use.

When you first turn on the **Controller**, the **Controller screen** will display the **Home Menu**. Use the **Up** and **Down** arrows to navigate to **Play Game** if it is not already displayed. Press **Enter**.

### NETWORK SELECTION SCREEN

Use the **Up** and **Down** arrows to choose the preset network for the sport you are scoring. If the sport is not listed, more networks can be added. Refer to **STEP 3** of the **Network Setup** section of the manual.

**The game is now ready to begin.**

All of the standard functions of the keyboard are labeled on the **Game Inserts**. For Additional assistance, the QR code below links to the full operations guide and other manuals.



### STARTUP MENU

If the game Controller loses power in the middle of a game or shuts off unexpectedly, the Controller will display the **Startup Menu** when powered back on.

The **LCD Screen** will display **Startup Menu - Continue Game**. Choose this option to immediately resume the game.

To end the current game without finishing it, use the **Up** or **Down** arrow to navigate to **Home Menu** and press **Enter**.

**3359**  
**Manuals and Specifications**

Use your phone camera to activate QR code.