




QUICK START GUIDE

Model #2240

HOME	<input type="text"/> <input type="text"/>	<input type="text"/> <input type="text"/>	<input type="text"/> <input type="text"/>	GUEST
<input type="text"/> <input type="text"/>	PERIOD	<input type="text"/>	<input type="text"/> <input type="text"/>	<input type="text"/> <input type="text"/>
<input type="checkbox"/> <input type="checkbox"/> BONUS	<input type="checkbox"/> POSS	<input type="checkbox"/> POSS	<input type="checkbox"/> <input type="checkbox"/> BONUS	
FOULS	PLAYER	FOULS		
<input type="text"/> <input type="text"/>	<input type="text"/> <input type="text"/>	<input type="text"/> <input type="text"/>	<input type="text"/> <input type="text"/>	<input type="text"/> <input type="text"/>
<input type="checkbox"/> WON	<input type="checkbox"/> T.O.L.	<input type="checkbox"/> T.O.L.	<input type="checkbox"/> WON	
	GAME			



QUICK START GUIDE

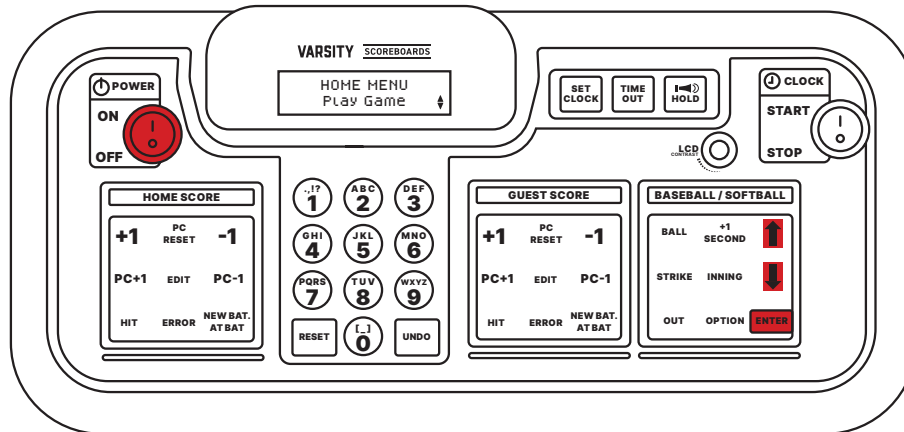

HOME MENU

When you first turn on the Controller, the Controller screen will display the **Home Menu**. Use the **Up** and **Down** arrows to navigate to **Play Game** if it is not already displayed. Press **Enter**.

NETWORK SELECTION SCREEN

Use the **Up** and **Down** arrows to choose the preset network for the sport you are scoring. If the sport is not listed, more networks can be added. Refer to **STEP 3** of the **Network Setup** section of the manual.

The game is now ready to begin.

All of the standard functions of the keyboard are labeled on the **Game Inserts**. For additional assistance, the QR code below links to the full operations guide and other manuals.



STARTUP MENU

If the game Controller loses power in the middle of a game or shuts off unexpectedly, the Controller will display the **Startup Menu** when powered back on.

The LCD Screen will display **Startup Menu - Continue Game**. Choose this option to **immediately resume** the game.

2240 Manuals and Specifications

Use your phone camera to activate QR code.

To end the current game without finishing it, use the **Up** or **Down** arrow to navigate to **Home Menu** and press **Enter**.