




QUICK START GUIDE

Model #1332

| | | | | | | |
|--------------------------|--------------------------|--------------------------|---------------|--|--------------------------|--------------------------|
| | | | • | | | |
| HOME | | | | | | GUEST |
| | | | PERIOD | <small>VARSITY SCOREBOARDS</small> | | |
| | | <input type="checkbox"/> | | <input type="checkbox"/> | | |
| | | GOAL | | GOAL | | |
| <input type="checkbox"/> | <input type="checkbox"/> | PENALTY | | PENALTY | <input type="checkbox"/> | <input type="checkbox"/> |



QUICK START GUIDE

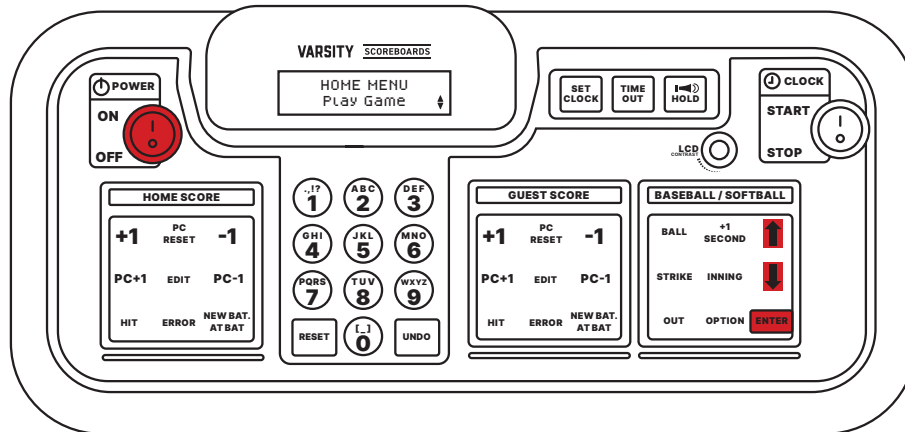

HOME MENU

When you first turn on the Controller, the Controller screen will display the **Home Menu**. Use the **Up** and **Down** arrows to navigate to **Play Game** if it is not already displayed. Press **Enter**.

NETWORK SELECTION SCREEN

Use the **Up** and **Down** arrows to choose the preset network for the sport you are scoring. If the sport is not listed, more networks can be added. Refer to **STEP 3** of the **Network Setup** section of the manual.

The game is now ready to begin.

All of the standard functions of the keyboard are labeled on the **Game Inserts**. For additional assistance, the QR code below links to the full operations guide and other manuals.



1332
Manuals and Specifications

Use your phone camera to activate QR code.

STARTUP MENU

If the game Controller loses power in the middle of a game or shuts off unexpectedly, the Controller will display the **Startup Menu** when powered back on.

The LCD Screen will display **Startup Menu - Continue Game**. Choose this option to **immediately resume** the game.

To end the current game without finishing it, use the **Up** or **Down** arrow to navigate to **Home Menu** and press **Enter**.