




QUICK START GUIDE

MODEL 3420

HOME <input type="text"/>	1ST HALF <input type="text"/>	<table border="1"><tr><td><input type="text"/></td><td><input type="text"/></td><td>● ●</td><td><input type="text"/></td><td><input type="text"/></td></tr></table>	<input type="text"/>	<input type="text"/>	● ●	<input type="text"/>	<input type="text"/>	2ND HALF <input type="text"/>	GUEST <input type="text"/>
<input type="text"/>	<input type="text"/>	● ●	<input type="text"/>	<input type="text"/>					
PENALTY <input type="text"/>	SHOTS <input type="text"/>	<small>VARSITY SCOREBOARDS</small>		SHOTS <input type="text"/>	PENALTY <input type="text"/>				



QUICK START GUIDE

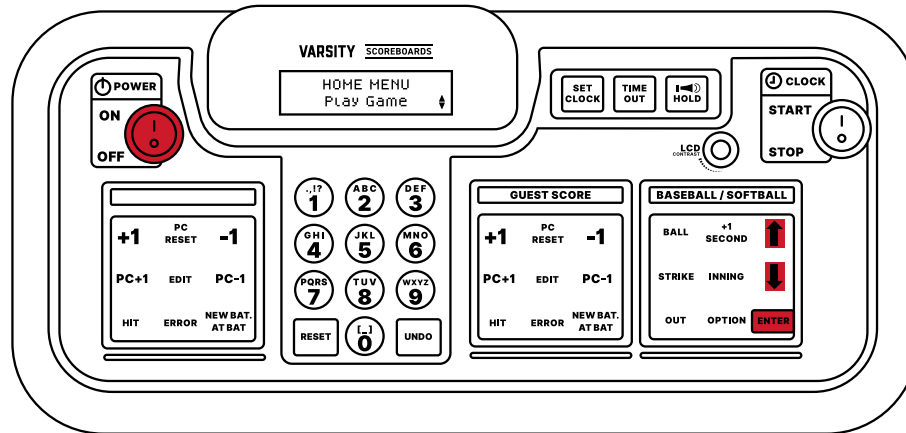

HOME MENU

NOTE: Optional rechargeable controller battery should be charged prior to use.

When you first turn on the **Controller**, the **Controller screen** will display the **Home Menu**. Use the **Up** and **Down** arrows to navigate to **Play Game** if it is not already displayed. Press **Enter**.

NETWORK SELECTION SCREEN

Use the **Up** and **Down** arrows to choose the preset network for the sport you are scoring. If the sport is not listed, more networks can be added. Refer to **STEP 3** of the **Network Setup** section of the manual.

The game is now ready to begin.

All of the standard functions of the keyboard are labeled on the **Game Inserts**. For Additional assistance, the QR code below links to the full operations guide and other manuals.



STARTUP MENU

If the game Controller loses power in the middle of a game or shuts off unexpectedly, the Controller will display the **Startup Menu** when powered back on.

The **LCD Screen** will display **Startup Menu - Continue Game**. Choose this option to immediately resume the game.

To end the current game without finishing it, use the **Up** or **Down** arrow to navigate to **Home Menu** and press **Enter**.

3420
Manuals and Specifications

Use your phone camera to activate QR code.