




# QUICK START GUIDE

MODEL 7424

<b>HOME</b>								<b>GUEST</b>
<input type="text"/> <input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/> <input type="text"/>	●	<input type="text"/> <input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/> <input type="text"/>
		<b>T.O.L.</b>				<b>T.O.L.</b>		
<b>DOWN</b>	<b>TO GO</b>			<b>VARSITY</b> <small>SCOREBOARDS</small>		<b>BALL ON</b>	<b>QTR</b>	
<input type="text"/>	<input type="text"/> <input type="text"/>					<input type="text"/> <input type="text"/>	<input type="text"/>	



## QUICK START GUIDE

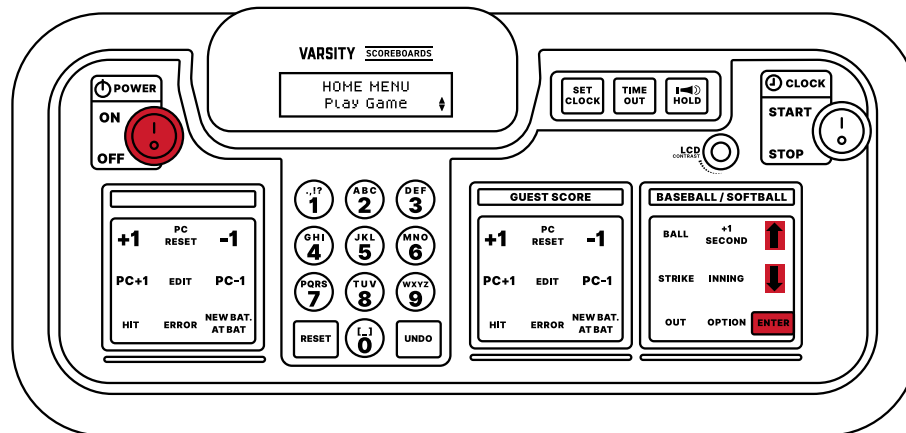

### HOME MENU

**NOTE:** Optional rechargeable controller battery should be charged prior to use.

When you first turn on the **Controller**, the **Controller screen** will display the **Home Menu**. Use the **Up** and **Down** arrows to navigate to **Play Game** if it is not already displayed. Press **Enter**.

### NETWORK SELECTION SCREEN

Use the **Up** and **Down** arrows to choose the preset network for the sport you are scoring. If the sport is not listed, more networks can be added. Refer to **STEP 3** of the **Network Setup** section of the manual.

**The game is now ready to begin.**

All of the standard functions of the keyboard are labeled on the **Game Inserts**. For Additional assistance, the QR code below links to the full operations guide and other manuals.



### STARTUP MENU

If the game Controller loses power in the middle of a game or shuts off unexpectedly, the Controller will display the **Startup Menu** when powered back on.

The **LCD Screen** will display **Startup Menu - Continue Game**. Choose this option to immediately resume the game.

To end the current game without finishing it, use the **Up** or **Down** arrow to navigate to **Home Menu** and press **Enter**.

**7424**  
**Manuals and Specifications**

Use your phone camera to  
activate QR code.