



QUICK START GUIDE


MODEL 7432

HOME	<input type="text"/>	T.O.L.	<input type="text"/>	<input type="text"/>	<input type="text"/>	GUEST	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
DOWN	TO GO	BALL ON	QTR				
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>				

Varsity Scoreboards logo: VARSITY SCOREBOARDS



QUICK START GUIDE

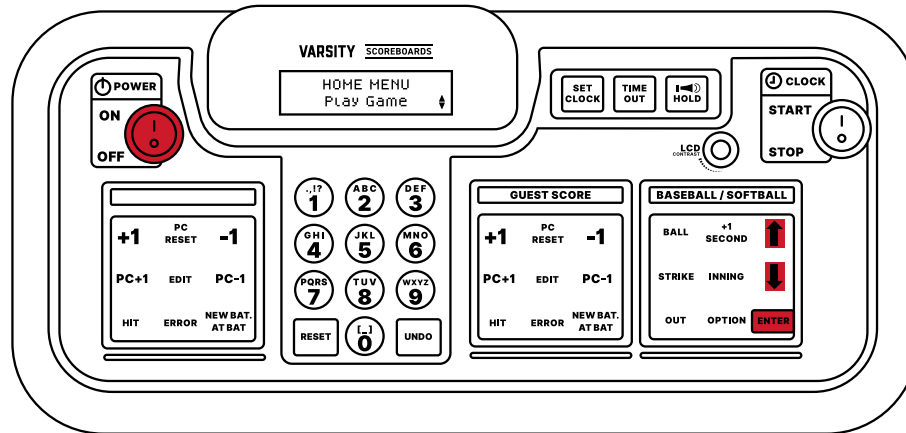

HOME MENU

NOTE: Optional rechargeable controller battery should be charged prior to use.

When you first turn on the **Controller**, the **Controller screen** will display the **Home Menu**. Use the **Up** and **Down** arrows to navigate to **Play Game** if it is not already displayed. Press **Enter**.

NETWORK SELECTION SCREEN

Use the **Up** and **Down** arrows to choose the preset network for the sport you are scoring. If the sport is not listed, more networks can be added. Refer to **STEP 3** of the **Network Setup** section of the manual.

The game is now ready to begin.

All of the standard functions of the keyboard are labeled on the **Game Inserts**. For Additional assistance, the QR code below links to the full operations guide and other manuals.



STARTUP MENU

If the game Controller loses power in the middle of a game or shuts off unexpectedly, the Controller will display the **Startup Menu** when powered back on.

The **LCD Screen** will display **Startup Menu - Continue Game**. Choose this option to immediately resume the game.

To end the current game without finishing it, use the **Up** or **Down** arrow to navigate to **Home Menu** and press **Enter**.

7432

Manuals and Specifications

Use your phone camera to activate QR code.